



Topaz CD5 and CD10 CD Player Remote Control Codes

All Codes are NEC format.

Remote Button	(NEC Code) IR Code
Open/Close	C0 3F 02 FD
1	C0 3F 0A F5
2	C0 3F 09 F6
3	C0 3F 08 F7
4	C0 3F 0E F1
5	C0 3F 0D F2
6	C0 3F 0C F3
7	C0 3F 12 ED
8	C0 3F 11 EE
9	C0 3F 10 EF
0	C0 3F 16 E9
Program	C0 3F 15 EA
Program Clear	C0 3F 14 EB
Pause	C0 3F 07 F8
Stop	C0 3F 44 BB
Play	C0 3F 45 BA
Skip Back	C0 3F 48 B7
Skip Forward	C0 3F 49 B6
Rewind	C0 3F 4C B3
Forward	C0 3F 4D B2

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: www.cambridgeaudio.com/sts

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2010