



Azur 651/751BD Blu-ray Player IR Codes

Button	IR Code	Hidden	
		13	1A
STANDBY	04		
EJECT	0C		
INFO/SOURCE	0E/31		
PAGE UP	10		
PAGE DOWN	11		
1	14		
2	08		
3	00		
4	05		
5	09		
6	01		
7	19		
8	15		
9	0D		
0	0A		
HOME	12		
GOTO	06		
CLEAR	02		
TOP MENU	50		
POP UP MENU	40		
SETUP	54		
PURE AUDIO	45		
UP	48		
LEFT	42		
ENTER	4D		
RIGHT	41		
DOWN	55		
PLAY/PAUSE	51		
STOP	52		
RETURN	49		
AUDIO/SUBTITLE	56/57		
REWIND	1B		
FORWARD	0B		
SKIP BACK	07		
SKIP FORWARD	0F		
RED	44		
GREEN	58		
BLUE	17		
YELLOW	03		
A-B/REPEAT	4F/53		
SAP/PIP	4E/47		
ANGLE/ZOOM	4B/43		
RES/TV TYPE	4A/16		

NEC CODE: 49 B6

AMP/AVR Commands (Multi-Function)

640R/650R (Default Mode)

RC5 SYSTEM: 16

Button	IR Code
SOURCE	99
STANDBY/MUTE	74/75
VOL UP	76
VOL DOWN	77

540R (SOURCE HELD during Battery Insert)

NEC: C0 C0

Button	IR Code
SOURCE	05
STANDBY/MUTE	0C/14
VOL UP	03
VOL DOWN	1F

AMP MODE (STDY/MUTE HELD during Battery Insert)

RC5 SYSTEM: 16

Button	IR Code
SOURCE	8 & 19
STANDBY/MUTE	12/13
VOL UP	16
VOL DOWN	17

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: www.cambridgeaudio.com/sts

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2008

Gallery Court, Hankey Place, London SE1 4BB England

Tel: +44 (0)20 7940 2200 Fax: +44 (0)20 7940 2233 Web: www.cambridge-audio.com