

840C CD/amp

System Code = A0 A0 (NEC Code)

Key	Command Code (hex)
1	01
2	09
3	11
4	19
5	02
6	0A
7	12
8	1A
9	03
0	0B
1+	13
Prog	1B
Play	15
Pause	1D
Stop	1C
Random	0E
Remain	0F
Skip left	04
Skip right	0C
Repeat	16
AB	17
<<	05
>>	0D
Intro	06
Space	1E
Open	07
Power toggle	44
Power On	46
Power Off	45
Bright toggle	47
Menu	48
Select	49
Mute	4A
Mute on	4B
Mute off	4C

Also incorporates Amplifier codes

System Code = 16 (RC5 Code)

Key	Command Code (dec)
Aux/Phono	4
CD	5
Tuner/DAB	3
DVD	1
AV/MD	2

Tape Mon	0
Source 7	6
Source 8	7
Vol -	17
Vol +	16
Mute	13
Amp on	14
Amp off	15
Standby toggle	12
Mute on	50
Mute off	51
Speaker Select	20
Mode	21
Bright	18
Source Up	8
Source Down	9
Clipping Off	10
Power amp on	23
Power amp off	24
Speaker select A	28
Speaker select B	29
Speaker select A + B	30

Also incorporates iPod commands

System Code = EE 87 (NEC Code)

<b>Key</b>	<b>Command Code (hex)</b>
Skip back	08
Play/pause	04
Skip forward	07
Menu (stop)	02