

## 640C CD/amp

System Code = A0 A0 (NEC Code)

Key	Command Code hex	Command Code dec
1	01	1
2	09	9
3	11	17
4	19	25
5	02	2
6	0A	10
7	12	18
8	1A	26
9	03	3
0	0B	11
1+	13	19
Prog	1B	27
Play	15	21
Pause	1D	29
Stop	1C	28
Random	0E	14
Remain	0F	15
Skip left	04	4
Skip right	0C	12
Repeat	16	22
AB	17	23
<<	05	5
>>	0D	13
Intro	06	6
Space	1E	30
Open	07	7
Power toggle	44	68
Power On	46	70
Power Off	45	69
Bright toggle	47	71

Also incorporates Amplifier codes

System Code = 16 (RC5 Code)

Key	Command Code dec
Aux/Phono	4
CD	5
Tuner/DAB	3
DVD	1
AV/MD	2
Tape Mon	0
Vol -	17
Vol +	16
Mute	13
Standby	12

Bright	18
Source Up	19
Source Down	20
Clipping Off	21
Clipping On	22
Mute On	50
Mute Off	51
Amp on	14
Amp off	15

Also incorporates Apple iPod codes

System Code = EE 87 (NEC Code)

<b>Key</b>	<b>Command Code (hex)</b>
Skip back	08
Play/pause	04
Skip forward	07
Menu (stop)	02